




Part No. 2350-0134

M0923 100909


**Fairing Polished Slotted Stainless Steel Windshield Trim, Slim Style.**

**Use with Memphis Shades Batwing Fairing and Windshield. Additional bolts included for Fairings with MS Tri-pouch fitted.**

## 1. Kit Contents

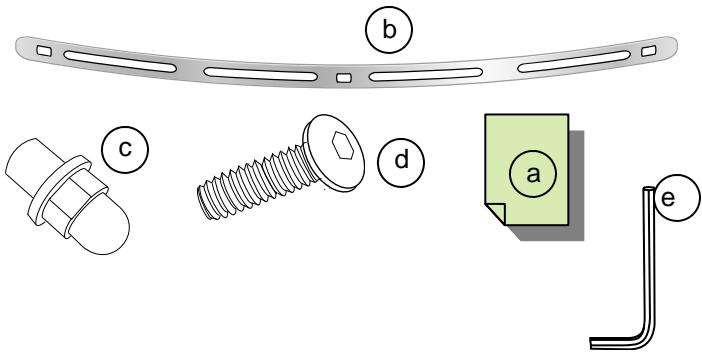

Re	Part #	Description	Qty
(a)	I0923	Mounting Instructions	1
(b)	S1213	Polished Stainless Steel Trim, Slim style	1
(c)	M997	Nylon Acorn Nut Shoulder Spacer	3
(d)	M972	1/4-20 7/8 SS Button Head Screw	3
(e)	M943	5/32" short arm allen wrench	1

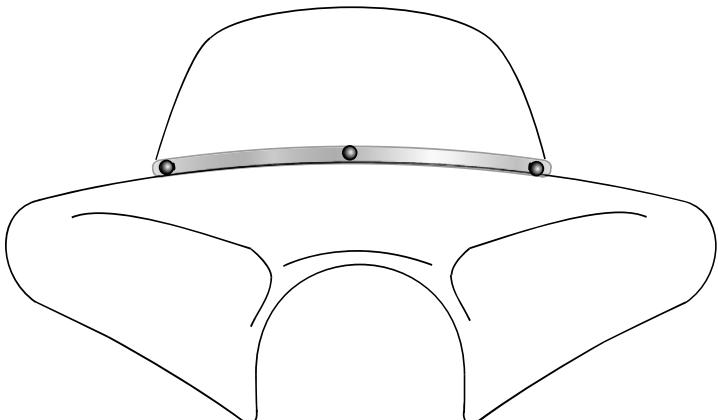

Memphis Shades warrants all product components, metal and plastic, against defects in materials and workmanship for 24 months.

### For Parts and Warranty Help, Contact:

Memphis Shades, Inc.

P.O. Box 429

Rossville, TN 38066

(901) 853 0293


Visit us on the web at [www.memphisshades.com](http://www.memphisshades.com) or you can also reach us by email:

[customerservice@memphisshades.com](mailto:customerservice@memphisshades.com)


## 2. Mounting Instructions

1. Additional tools required, not included in this kit: 7/16" or 11mm wrench.


2. Remove the existing Acorn Nut Shoulder Spacer from the center hole. Withdraw the bolt and washer.

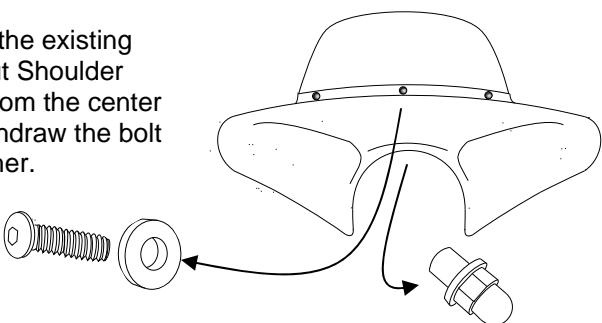


3. Align the Polished Slotted Stainless Steel Trim, Slim Style over the center hole and insert a Stainless Steel Button Head Screw. Secure in place with an Acorn Nut Shoulder Spacer

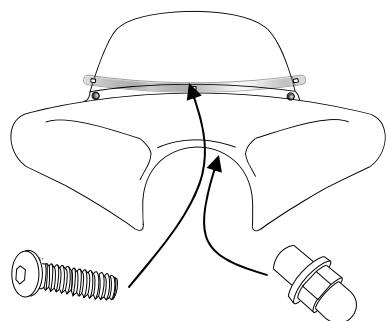

4. Remove the existing Acorn Nut Shoulder Spacers from the left and right holes. Withdraw the bolts and washers.

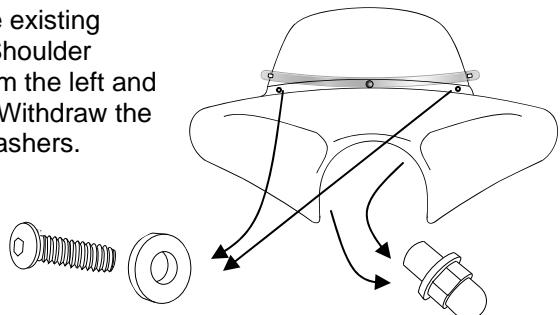

5. Align the Polished Slotted Stainless Steel Trim, Slim Style over the left and right holes and insert Stainless Steel Button Head Screws. Secure in place with Acorn Nut Shoulder

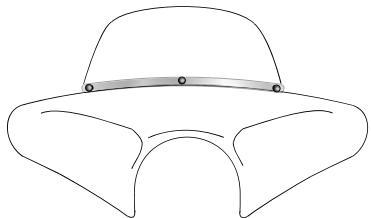

*The Fusion of Style & Function*