



Part No. 2321-0220

MEB8962

REVISION 0

Trigger Lock Mounting Kit
MS Fats / Slim
Black

Aluminum parts are electrocoated (E-coated)
for durability and weather resistance.

Before assembly, read Warnings inside



WARNING


1. During installation, make sure that the windshield and hardware do not interfere with any cables or wiring when the forks are turned all the way in either direction. Also make sure , through the full range of adjustment, that the windshield and hardware do not hit the gas tank.
2. This is a detachable windshield, ALWAYS make sure the locking mechanism is fully engaged after installing the windshield.
3. The improper installation of this kit and related components could result in serious injury or death.



CAUTION

1. Memphis Shades windshields are made from Lucite® acrylic, and will last for years with proper care. Clean your windshield with plenty of soapy water (mild dish-washing liquid is best) and a soft cotton cloth. Use your bare hands to feel and dislodge bugs, or cover with a wet, soapy towel and let it soak. Don't use paper towels and scrape with anything. Small scratches can be removed with NOVUS #2.
2. Never use any glass cleaning products, petroleum based chemicals, or cleaning agents with ammonia, bleach or any other harsh chemicals. This includes (but not limited to) RainX, brake fluid, acetone, paint thinner, benzene and gasoline. "If it hurts your nose, it will hurt the plastic."
3. Glass cleansing agents will cause severe damage to your windshield, and will void your warranty. For care and cleaning we recommend using **Memphis Shades All Kleer**, a unique cleaner/polish, bug remover and rain repellant that leaves a super slick surface that makes the next cleaning even easier.
4. At certain times of the day the Sunlight can reflect off the curvature of a windshield and cause extreme heat build-up on motorcycle instruments and instrument panel. Take care when parking. Park facing the sun, place an opaque object over the instruments or adjust the windshield to avoid reflections.

1. Kit Contents

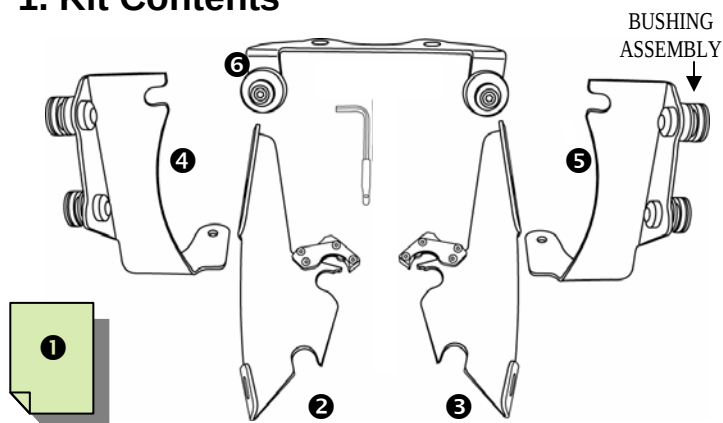

Ref	Code	Description	Qty
①	I8962B	Mounting Instructions	1
②	M1105EB	Clutch side plate assembly	1
③	M1104EB	Throttle side plate assembly	1
④	M1101EC	Clutch side bracket assembly	1
⑤	M1100EC	Throttle side bracket assembly	1
⑥	M1099EC	Upper bracket assembly	1

2. Mounting Instructions

Additional tools required that are not included in this kit. 7/16" or 11mm Wrench, 12mm and 14mm deep well sockets and ratchet.

1. **Cover gas tank and front fender with towels to avoid damage during installation.**
2. Install the two mounting plates onto the windshield, using the bottom and third bolt up. Leave the nylon washers off. The small tab goes to the bottom, big one at the top. *Tabs point out towards the edge of the Windshield.* (Fig 1)
3. Remove and retain the two nuts that hold the Headlight to the Lower Triple Tree. Place a protective cloth over the Turn Signal Bar. Lift the Headlight and allow it to hang over the Turn Signal Bar. (Fig 2)
4. Remove and retain the two nuts that hold the Handlebar Risers to the upper Triple Tree. Pull the Wire Loom Bracket away from the Riser Bolts. Slip the upper bracket on to the bolts followed by the wire loom. Re-install and tighten the Riser Nuts. (Fig 2)
5. Loosen the Allen bolts on upper bracket and slip the left and right side bracket into the upper bracket and loosely tighten. "To be tightened later, see step 8"

Continued overleaf.....

Memphis Shades warrants all product components, metal and plastic, against defects in materials and workmanship for 24 months.

For Parts and Warranty Help, Contact:

Memphis Shades, Inc.

P.O. Box 429

Rossville, TN 38066

(901) 853 0293

Visit us on the web at www.memphisshades.com or you can also reach us by email:

customerservice@memphisshades.com

Trigger Lock Mounting Kit
MS Fats / Slim
Black

2. Mounting Instructions, continued

6. Re-install the Headlight through the lower holes in the left and right side bracket and through the lower triple tree. Re-install and tighten Headlight Bolts.

7. Install the windshield by placing the lower slots into the lower mounting bushings. Slip the upper slots into the upper mounting bushings and gently but firmly seat the slots into place. Lock the locking mechanism into place. (Fig 3)

8. Loosen the upper Allen bracket mounting bolts and re-tighten.

9. Adjust the height, angle and alignment of the windshield and tighten **ALL** bolts.

Note: This is a detachable windshield, ALWAYS make sure the Locking Mechanism is Fully Engaged after installing the windshield! (Fig-3)

Fig. 1

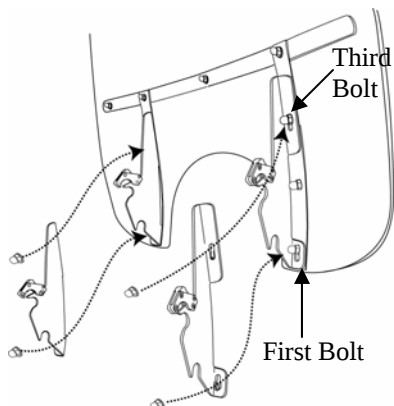


Fig. 2


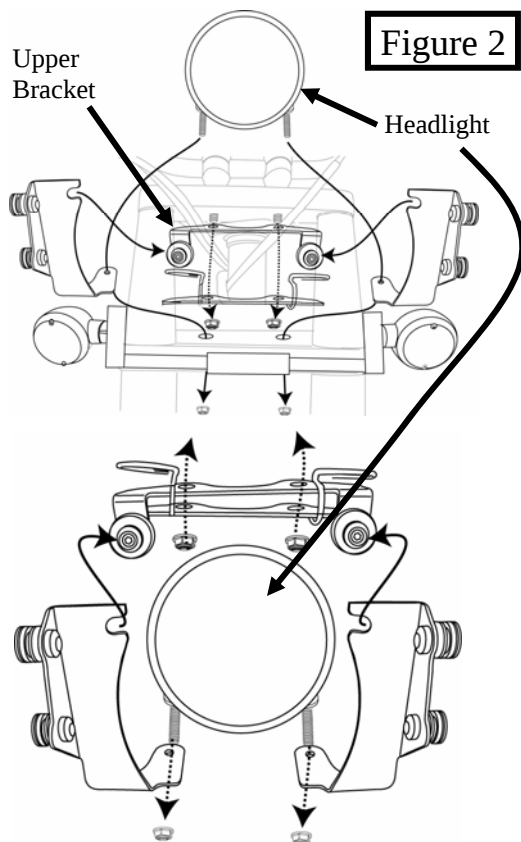


Figure 2

Fig. 3



1. Place lower slot into lower bushing.
2. Rotate top slot into place.
3. Secure locking Mechanism.
4. Loosen Allen Bolt to adjust angle, then re-tighten Allen Bolt.

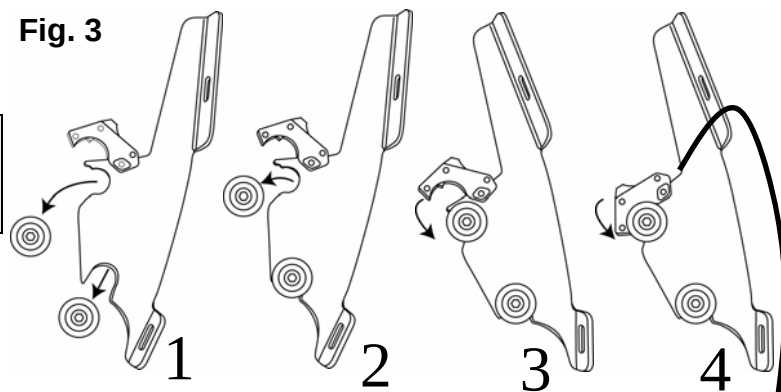